



I = Charge Indicator Lamp Control
 A = Armature/Battery Voltage Sensing
 S = Stator winding Centertap (~ 6VDC)
 F = Field Strength Control Winding

NOTE: The Alternator Regulator housing must be grounded to the chassis.