

PART 14-03 Front Suspension

UPPER AND LOWER A-FRAME BUSHINGS

Removal

1. Remove upper and/or lower A-frame(s).
2. Using Tool T72D-3044 press out the bushings from the inside of the A-frame.

Installation

1. Press new bushings into the A-frame using Tool T72D-3044.
2. Install the A-frame(s).

PART 14-32 Rear Suspension

2. Using Tool T72-3044 and a press remove the bushings from the arm(s). The bearings are shouldered and must be pressed out from the inside.

UPPER AND LOWER A-FRAME BUSHINGS

Removal

1. Remove upper and/or lower suspension arm(s).

Installation

1. Using Tool T72-3044 press new bushings into the upper and/or lower suspension arm(s).
2. Install the suspension arm(s).

SPECIAL TOOLS

Tool No.	Description
T72D-3006	A-Frame Bushing Removal and Installation Tool