

GENERAL

Article No. 62

TOOL KITS

Complete tool kits for the Pantera are not available through Ford Parts Division. The following items should be ordered in the normal manner through your facing depot.

PART NUMBER	PART NAME
D16Y-17005-A	Tool Bag
D26Y-17080-A	Jack Assembly
D26Y-17081-A	Jack Handle
D16Y-18081-B	Jack Handle Extension
D16Y-17032-A	Wheel Nut Wrench
D16Y-6322600-B	Emergency Window Crank

NOTE: The following items are not available through Ford Parts Division and should be purchased locally.

- Double Open End Wrench – 10mm/11mm
- Double Open End Wrench – 12mm/13mm
- Double Open End Wrench – 16mm/17mm
- Double Open End Wrench – 18mm/19mm
- Tubular Wrench for Spark Plugs – 16mm

- 5" Screwdriver – Flat Blade
- 5" Screwdriver – Phillips Cross Head

Pair Electrician's Pliers

In the event a vehicle is received without a tool kit, the items should be procured as above and claim for reimbursement filed with the carrier, using Form 3715, attaching annotated documents and indicating the tool kit was missing upon the receipt of the vehicle.

BODY

Article No. 63

ELASTOMER REPAIR PROCEDURES – FRONT BUMPER

The Pantera "L" series Elastomer front bumper assembly does not require replacement to correct cuts, scratches or abrasions.

These bumpers are repairable using the following procedures:

1. Sand the area to be repaired with 220 sandpaper. Ensure area is free of burrs.
2. Fill the damaged area with red or grey body putty.
3. Finish sanding the area with No. 400 sandpaper.
4. Then, spray the area or bumper with flat black paint.

WARRANTY STATUS: Reimbursable within the provisions of the Warranty and Policy Manual.

TIME: "Actual time" as defined in the Warranty and Policy Manual.

DLR. CODING: Basic Part No. 17757 – Code 14

Article No. 64

FRONT HOOD – EMERGENCY RELEASE CABLE

An emergency front hood release cable is now available for service and can be installed on prior models as follows:

1. Open the front hood and drill a 5/16" dia. hole in the R.H. side of the brake pedal box, in line with the hood latch (See Fig. 1).

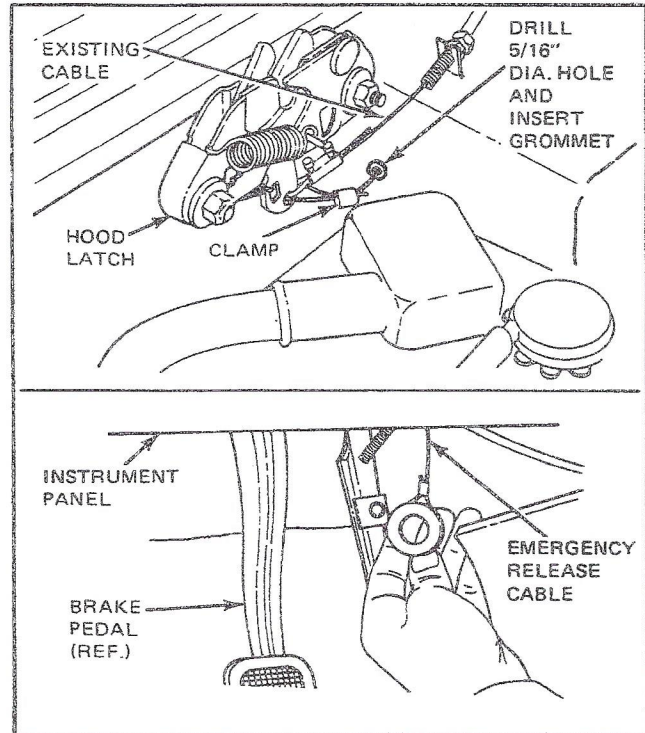


Fig. 1—Article 64

2. Insert the rubber grommet into position (grommet furnished in D36Y-16916-A kit).
3. From inside the vehicle, feed the emergency release cable through the grommet.
4. Install the cable attaching clamp over the cable and feed the cable through the hood latch release mechanism. Then, loop the cable back through the clamp and crimp the clamp.
5. Check hood latch release operation.
6. Close the hood.

PART NUMBER	PART NAME	CLASS
D36Y-16916-A	Emergency Release Cable Kit – Front Hood	C

PRODUCTION CORRECTION: 4/6/73

WARRANTY STATUS: Reimbursable within the provisions of the Warranty and Policy Manual.

OPERATION: SP-16916-A-73

TIME: 0.3 Hr.

DLR. CODING: Basic Part No. 16916 – Code 01